

inlco grinders

SERVICE INSTRUCTIONS

DAILY INSPECTION

- Move and loosen the angle setting to ensure free movement and clean the guide holder with the included brush. Follow the steps in the video from the QR code.



FILTER CHANGE

- Change the filter on the grinder when it is full, when you change grinding position or when you change the grinding disc. Follow the steps in the video from the QR code.


 


CHANGE GRINDING POSITION



- When you want to change the grinding position, please follow the steps in the manual or follow this video shown in the QR code.





1. grinding track

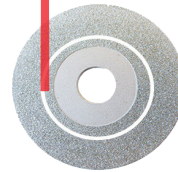

 2. grinding track

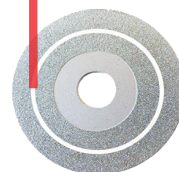

 3. grinding track

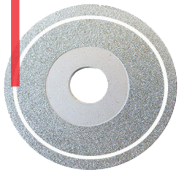

IMPORTANT INFORMATION

- Do not use the Neutrix grinder while it is in the case because the grinder needs air in order to cool the motor and the dust filter to avoid overheating.
- After several repeated grindings, Neutrix can overheat and require cooling time between grindings.



- It is advisable that the person performing the cleaning wears the necessary protective gear.
- In order to avoid transport damage keep the Neutrix in the case and ensure proper packaging of the case
- If it is necessary to change the grinding disc, please follow the steps in the manual or see the video shown in the QR code.
- Please return full dust filters to the distributor.

