
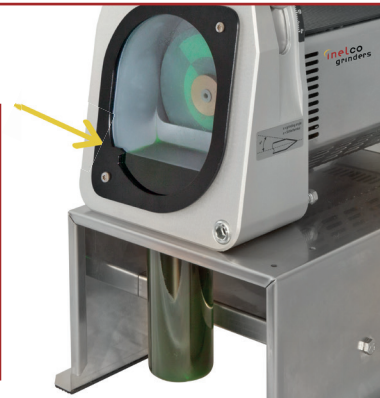


# inelco grinders SERVICE INSTRUCTIONS

## DAILY INSPECTION

- Visual inspection for damage, leaks, fluid level and degree of contamination of the grinding fluid and the grinding console.

Ensure free movement of the angle adjustment.

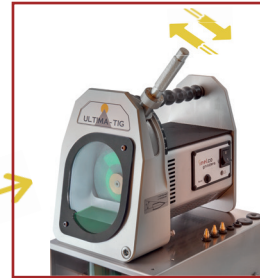

## MONTHLY INSPECTION/ 1000 GRIND SERVICE

- Clean the inside of the grinding chamber when the LED **lights** yellow or at least once every month following the steps described in the manual or see the video shown in the QR code.



## QUARTERLY INSPECTION/ 5000 GRIND SERVICE

- Take off and clean the whole grinding console and the inside of the grinding chamber when the LED **blinks** yellow or at least once every three months, following the steps described in the manual. In this step, we recommend to use warm water or see the video shown in the QR code.



- Clean the grinder thoroughly each time the grinding disc is replaced, when the dust collector is full, or earlier if necessary. It is advisable that the person performing the cleaning wears the necessary protective gear.

- In order to avoid transport damage, the grinding liquid, the dust collector, the worktable and possible add-ons such as the AutoGrind Digital, must be unmounted.

- If it is necessary to change the grinding disc, please follow the steps in the manual or see the video shown in the QR code.



- When the dust collector is full, please return it to the distributor.